


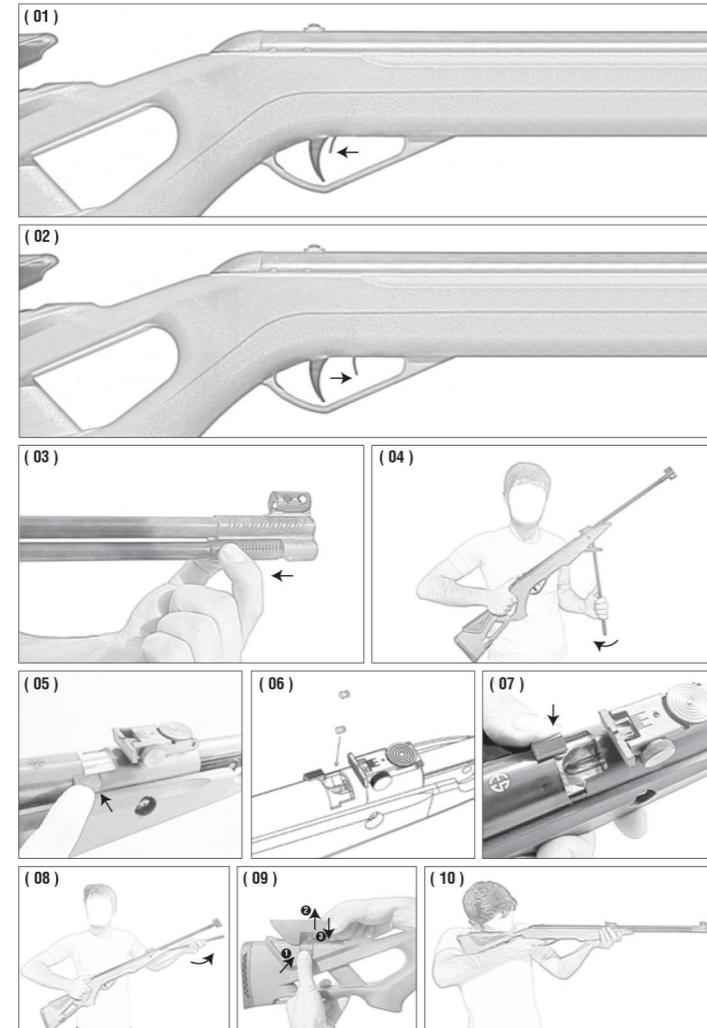


**Voltran Av Silahları ve İnş. San. Tic. Ltd. Şti.**  
Sanayi Mh. Uran Sok. No: 7 34906  
Kurtköy, Pendik - İSTANBUL / TURKEY  
T: +90 (216) 420 5380 (pbx)  
F: +90 (216) 527 8371  
info@blank-pistol.com  
voltran@blank-pistol.com  
**www.blank-pistol.com**  
**www.voltran.com.tr**  
www.facebook.com/ekolvoltran  
www.instagram.com/ekolvoltran

Satış sonrası müşteri hizmetleri • T: +90 553 842 11 84



PARÇA LİSTESİ / PART LIST

1 HT.107.01DAKV	2 HT.505.06DAKG	3 HT.1105.05DAK	4 HT.107.02KKV	5 HT.103.18TMSV	6 HT.108.07TS	7 HT.103.26TEMP	8 HT.103.21EP																	
9 HT.103.25EHSP	10 HT.103.22TP	11 HT.104.02TEY	12 HT.104.05EHSY	13 HT.104.08EY	14 HT.104.06TISY	15 HT.104.07PKSY	16 HT.102.05TIS	17 HT.102.07PKS	18 HT.103.20TYP	19 HT.103.28TAV														
20 HT.105.16TAP	21 HT.107.03DMV	22 HT.108.03DMVP	23 HT.102.02EMS	24 HT.103.23TMSF	25 HT.102.06TMS	26 HT.1101.01T	27 HT.102.04DKS	28 1007.07KV	29 HT.2103.04KK	30 HT.2102.05KSG	31 HT.103.19PKV	32 HT.105.22PK	33 HT.1105.01D	34 HT.105.10PGK	35 HT.103.05PB	36 HT.103.07PYÖT	37 HT.105.15KSPS	38 HT.102.04DKS	39 HT.104.01PY	40 HT.2103.01N				
41 HT.2103.02PG	42 HT.2103.03ST	43 HT.102.01EHS	44 6305.05GSO	45 HT.2107.01KKT	46 HT.103.12PYTG	47 HT.2107.02SYO	48 HT.105.14KSÜP	49 HT.2105.03SKP	50 HT.2101.01SYP	51 HT.108.01GS	52 HT.105.18GYP	53 HT.103.35GYS	54 HT.103.33GBP	55 HT.103.31GYAV	56 HT.103.34GMV	57 7107.01GKV	58 HT.105.25AG	59 HT.2105.01KKP	60 2207.02EB	61 2204.09EHY	62 HT.104.04GY	63 HT.102.03AS	64 2004.04IY	65 HT.2105.02S
66 HT.1105.02DY	67 HT.103.32GVV	68 HT.2105.04GAP	69 HT.102.08GS	70 HT.107.01DAKV	71 HT.1105.03DYD	72 HT.1105.04YMP	73 HT.1107.01YS	74 HT.7104.09BYK	75 HT.103.32GVV	76 HT.2105.04GAP	77 HT.102.08GS	78 2207.02EB	79 2204.09EHY	80 HT.104.04GY	81 HT.102.03AS	82 2004.04IY	83 HT.2105.02S	84 HT.1105.02DY	85 HT.107.01DAKV	86 HT.1105.03DYD	87 HT.1105.04YMP	88 HT.1107.01YS	89 HT.7104.09BYK	

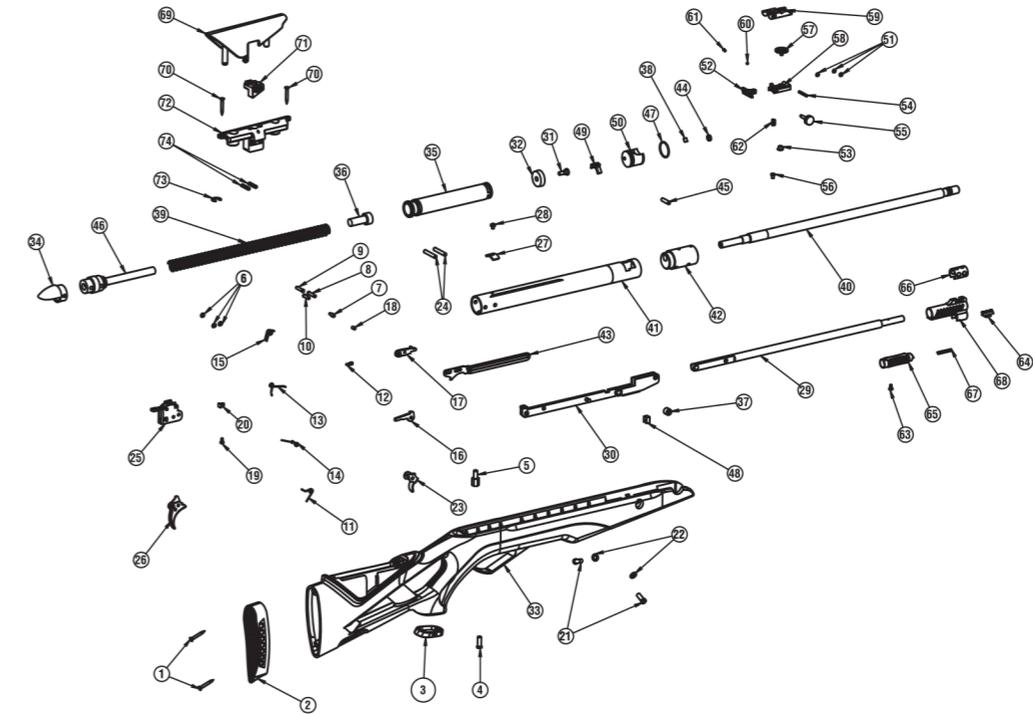

Havali tüfeğinizi kullanmadan önce bu kitapçığı dikkatlice okuyunuz.  
Read this booklet carefully in its entirety before starting to use your air rifle.

Kalibre / Caliber 4,5 - 5,5 - 6,35 mm  
Tam Boy / Overall Length 1086 mm  
Genişlik / Width 49 mm  
Yükseklik / Height 190 mm  
Boş Ağırlığı / Unloaded Weight 3000g



## UYARILAR:

**GİRİŞ:** Ekol havali tüfeğinizi kullanmadan önce aşağıdaki güvenlik kurallarını okumalı ve anlamalısınız.

**UYARI:** Bu oyuncak değildir. Güvenlik kurallarının ihlali ağır yaralanmalara sebebiyet verebilir. **Dikkat:** Bu ürünü gözetim altında olmadan 18 yaşından küçüklerin kullanmaması tavsiye edilir.

### GÜVENLİK KURALLARI :

- Ekol havali tüfeği elinize aldığınızda tüfeğinizin boş olduğundan emin olun. Tüfeği daima emin yöne doğrultun. Hiç kimse hiçbir tüfeğin palmayacağına dair garanti veremez. Bundan dolayı tedbirli olun.
- Her zaman göz koruması (gözlük) kullanın.
- Her zaman kulak koruması (kulaklık) kullanın.
- Havali tüfek her zaman resit (18 yaş üstü) insanlarla gözetiminde kullanılmalıdır.
- Öncekiyle düşünün ve sonra ateşleyin.
- Tüfeğiniz dolu olmasa bile insanlara ve hayvanlara doğrultulmamalıdır.
- Tüfeğinizi elinize alırken parmağınızı tetikten uzak tutunuz. Ateşleme açması yalnızca Resim-5 da gösterildiği gibi aparatı ok yönünde iterek açınız. Bir adet saçma yükleyiniz(Resim-6). Saçma yüklemeye parçasını ok yönünde tetik kapatınız(Resim-7).
- Havali tüfek kullanın kişi kesinlikle uyuyatırmıcı ve/veya alkol almamalıdır.
- Atış yaparken saçmayla (mühimmatla) ikinci defa ateş yapmayınız.
- Havali tüfeği ateşlemeye hazır olana kadar doldurmayın. Havali tüfeğin dolu bir yütüne, koşma ve yitme gibi eylemlerde bulunmayınız. Ateşlemeye hazır olan bir tüfeği kesinlikle arabada bulundurmayınız.
- Havali tüfeğin ve saçmalar çocukların erişemediği bir yerde muhafaza ediniz.
- Havali tüfeği kullandık muhafaza ettiğinizde haznedeki kesinlikle saçma olmadığınına emin olunuz.
- Havali tüfeğinizin hiçbir parçasına müdahale etmeyiniz. Arıza oluştuğu zaman profesyonel silah ve tüfek tamircisine danışınız.
- Tüfeğinizin tamamen boş olduğundan emin olmadan ateş almasını veya av sahasını terk etmeyiniz.

Son bir kontrol yapınız. Tüfeğinizi kurunuz ve boş bir alana doğru boş atış yapınız.

### GÜVENLİK UYARILARI:

- Bu havali tüfeği kuruluğunda saçma yüklenildiğinde emniyet tetikini kaldırın ve tetik okültüldüğünde ateş alacaktır.
- Havali tüfeğinizi kullanmaya başlamadan önce nasıl çalıştığını ve gerekli emniyet tedbirlerini neler olduğunu öğreniniz.
- Tüfek boş olsa bile ateş etmeye niyetiniz olduğuna hiçbir şeyte tüfeğinizi doğrultmayın. Tüfeğin namlusunu her zaman güvenli bir yere doğru tutunuz. Tüfeğinizi namlusundan tutup kendinize doğru hiçbir zaman çekmeyiniz. Her zaman güvenli hedeflere nişan alınız. Bir yaralanma veya hasara sebebiyet vermeme için; hedefi vurmadınız durumunda saçmanın nereye gidebileceğini her zaman düşününüz. Ateş yapmadan önce hedefinizi emin olunuz ve hiçbir zaman seslere ateş yapmayınız. Saçmaların sekmesine sebebiyet verecek hedeflere ve suya hiçbir zaman ateş yapmayınız. Ateş yapmayacaksanız tüfeğe hiçbir zaman saçma koymayınız. Dolu veya kurulu bir tüfeğe yürümeünüz, koşmayınız ve zıplamayınız. Tüfeğinizi taşıırken tüfeğin boş ve emniyetinin açık olduğundan emin olunuz. Tüfeğinizi çökmeyiniz ve tüfeğin parçalarını değişikliki yapmaya çalışmayınız. Tüfeğin yanlış, hatalı, dikikatsız ve kötü niyetli kullanımından

doğabilecek tüm yaralanma ve hasarlarından tamamen kullanıcı sorumlu olacaktır.

### EMNİYET SİSTEMİ:

Tüfeğinizin emniyet sistemi tetiğin ön kısmındadır. Emniyet Resim-1 ve Resim-2 deki gibi açılıp kapatılabilir. Emniyet açık durmadıkça tetik çekilemez ve tüfek ateş alamaz. Emniyet ok yönünde (Resim 2) itilerek kapatılır ve ateş hazır duruma gelir. **Dikkat!** Tüfeğinizle atış yapmaya tam hazır olana kadar tüfeğinizin emniyetini açık durumda tutunuz.

### TÜFEĞİNİZİN KULLANILMA TALIMATI:

Kuruma kolu düğmesini ok yönünde çekiniz(Resim-3). Daha sonra emniyet namludan tutarak namluyu tüfek kuruluğuna kadar aşağıya doğru çekiniz. (Resim-4 ).Tüfek kurulduğunda bir kırılme sesi duyulacaktır. **Dikkat!** Tüfeği kurulum sırasında uzun süre muhafaza etmeyiniz. Bu durum tüfeğin yayının eriyolmasına ve tüfeğinizin performansının düşmesine sebep olacaktır. **TÜFEĞE SAÇMA(Mühimmat) KONULMASI:** Tüfeğiniz saçma yüklemek için Resim-5 da gösterildiği gibi aparatı ok yönünde iterek açınız. Bir adet saçma yükleyiniz(Resim-6). Saçma yüklemeye parçasını ok yönünde tetik kapatınız(Resim-7).

### Dikkat!

Tüfeğiniz kaç kalibre ise kullanılan saçma (mühimmat) aynı kalibre olmak zorundadır. **TÜFEKLE ATIŞ YAPILMASI:** Namluyu tamamen kapatın. (Resim-8). Namlu tamamen kapandığında bir 'klik' sesi duyulacaktır. Yanaklık Resim 9-da gösterildiği gibi uygun pozisyona ayarlanabilir. Güvenli bir hedefe nişan alın ve tüfeğinizin emniyet sistemi emniyeti 'kapalı' konuma getirip ateş etmeye hazırlanın. (Resim-10) Tüfeği işaret parmağınızı hafifçe çekiniz ve tüfek ateş edecektir.

### TÜFEĞİN BAKIMI, TEMİZLENMESİ VE YAĞLANMASI:

Tüfeğinizi periyodik olarak silah yağıyla yağlayınız. Havali tüfeğinizi uzun süredir kullanıyorsanız veya çok tozlu ortamlarda kullanmışsanız veya çok nemli ortamlarda kullanmışsanız tüfeğinizin yağlama çok önemli ve gereklidir. Havali tüfeğinizi her 250 atışta bir yağlamamız önerilir. Her harbi ve bez parçası yardımıyla namlunun içini her 500 atışta bir temizlememiz önerilir. Tüfeğin yağlanmadığı veya temizlenmeden önce boş ve kuruluması olması gerekmektedir. Tüfeğin ve namlusunun temiz olduğundan her zaman emin olunuz. Tüfeğiniz içi, mekanizmasına su, kum, çamur gibi maddeleri girerse tüfeğinizi kullanmayınız ve komple temizlik yaptırması için bir tüfek tamircisine götürünüz. Tüfeğinizin emniyeti düğünü zıplama ve diğer durumlarda temizlenmez durumda tehlikeli durumlara ortaya çıkarılır.

### SAFETY WARNINGS:

- When this air rifle is when it is set up, loaded with buck shots, its safety is turned off (if any) and the trigger is pulled.
- Learn how your air rifle works and what the required safety measures are before starting to use your rifle.
- Do not point the air rifle towards anything you don't intend to shoot at, even if the rifle is empty. Always point the barrel of the rifle to a safe direction.
- Never grip the air rifle from its barrel and pull it towards yourself.
- Always aim at safe targets. Always consider where the buck shot could end up if you missed your target in order to prevent any injuries or damages.
- Be sure of your target before shooting and never shoot at voices.
- Never shoot at targets that could cause the buck shots to bounce off, or at water.
- Never load any buck shots into the air rifle if you're not planning to shoot.
- Do not walk, run or jump with a loaded and set up air rifle.
- Make sure that your air rifle is empty and its safety is on when carrying it.
- Do not disassemble your air rifle, and do not attempt to modify its parts.

The user shall be responsible for all injuries and damages that could result from the incorrect, faulty, careless or ill-intentioned use of the air rifle.

The safety system of your rifle is located in front of the trigger.Safety can be turned on / off as shown in Figure-1 and Figure-2. When the safety is on, the trigger is not pulled and the rifle does not fire. Please turn your rifle's safety off by pushing the safety latch towards the arrow shown in Figure-2 and prepare your rifle for shooting. **Caution!** Keep your gun safe until you are ready to shoot with your rifle.

When you take your Ekol Major Air Rifle into your hands make sure that it is empty. Always point the rifle to a safe direction. Nobody can guarantee that the rifle will not fire. Therefore always be cautious.

- 1 Always use eye protection (goggles).
- 2 Always use ear protection (ear cups).
- 3 The air rifle should always be used under the supervision of mature adults (over the age of 18).
- 4 Think first, then fire.
- 5 Even if your rifle is not loaded it should not be directed at people and animals.
- 6 When taking your rifle into your hand, keep your finger away from the trigger. Do not place your finger on the trigger until you are ready to fire.
- 7 We recommend you not to shoot at hard surfaces which may cause the shot to bounce off, at water or in water.
- 8 The user of the air rifle should never take any drugs and/or alcohol.
- 9 Do not use the used buck shots (ammunition) more than once.
- 10 Do not load the air rifle until you're ready for shooting. Do not walk, run or jump when your air rifle is loaded. Never store a rifle that is ready to shoot in your car.
- 11 Store the air rifle and buck shots out of reach of children.
- 12 When you use and maintain the air rifle ensure that there are no buck shots left in the chamber.
- 13 Do not tamper with any part of your air rifle. When a malfunction occurs consult a gun and rifle repairer.
- 14 Do not leave the shooting grounds or the hunting eld until you're sure that your rifle is completely empty. Make a nal check. Set your rie and take a shot towards an empty area.

### MAINTENANCE, CLEANING AND OILING THE AIR RIFLE

Oil your rifle periodically with rifle oil. It is very important and required to oil your air rifle if you haven't used it for a long time Or if you have used it in very dusty environments or if you have used it in very humid environments. It is recommended that you oil your air rifle every 250 shots. Do not point the air rifle towards anything you don't intend to shoot at, even if the rifle is empty. Always point the barrel of the rifle to a safe direction. Always make sure that the air rifle and its barrel are clean. If water, sand, mud, etc. enters the inner mechanism of the air rifle please do not use the rifle and take it to a rifle repairman for a complete cleaning. If you don't keep your air rifle in a clean and properly operational condition it can result in dangerous situations.

The user shall be responsible for all injuries and damages that could result from the incorrect, faulty, careless or ill-intentioned use of the air rifle.

The safety system of your rifle is located in front of the trigger.Safety can be turned on / off as shown in Figure-1 and Figure-2. When the safety is on, the trigger is not pulled and the rifle does not fire. Please turn your rifle's safety off by pushing the safety latch towards the arrow shown in Figure-2 and prepare your rifle for shooting. **Caution!** Keep your gun safe until you are ready to shoot with your rifle.

When you take your Ekol Major Air Rifle into your hands make sure that it is empty. Always point the rifle to a safe direction. Nobody can guarantee that the rifle will not fire. Therefore always be cautious.

- 1 Always use eye protection (goggles).
- 2 Always use ear protection (ear cups).
- 3 The air rifle should always be used under the supervision of mature adults (over the age of 18).
- 4 Think first, then fire.
- 5 Even if your rifle is not loaded it should not be directed at people and animals.
- 6 When taking your rifle into your hand, keep your finger away from the trigger. Do not place your finger on the trigger until you are ready to fire.
- 7 We recommend you not to shoot at hard surfaces which may cause the shot to bounce off, at water or in water.
- 8 The user of the air rifle should never take any drugs and/or alcohol.
- 9 Do not use the used buck shots (ammunition) more than once.
- 10 Do not load the air rifle until you're ready for shooting. Do not walk, run or jump when your air rifle is loaded. Never store a rifle that is ready to shoot in your car.
- 11 Store the air rifle and buck shots out of reach of children.
- 12 When you use and maintain the air rifle ensure that there are no buck shots left in the chamber.
- 13 Do not tamper with any part of your air rifle. When a malfunction occurs consult a gun and rifle repairer.
- 14 Do not leave the shooting grounds or the hunting eld until you're sure that your rifle is completely empty. Make a nal check. Set your rie and take a shot towards an empty area.

### ENGLISH

The user shall be responsible for all injuries and damages that could result from the incorrect, faulty, careless or ill-intentioned use of the air rifle.

The safety system of your rifle is located in front of the trigger.Safety can be turned on / off as shown in Figure-1 and Figure-2. When the safety is on, the trigger is not pulled and the rifle does not fire. Please turn your rifle's safety off by pushing the safety latch towards the arrow shown in Figure-2 and prepare your rifle for shooting. **Caution!** Keep your gun safe until you are ready to shoot with your rifle.

When you take your Ekol Major Air Rifle into your hands make sure that it is empty. Always point the rifle to a safe direction. Nobody can guarantee that the rifle will not fire. Therefore always be cautious.

- 1 Always use eye protection (goggles).
- 2 Always use ear protection (ear cups).
- 3 The air rifle should always be used under the supervision of mature adults (over the age of 18).
- 4 Think first, then fire.
- 5 Even if your rifle is not loaded it should not be directed at people and animals.
- 6 When taking your rifle into your hand, keep your finger away from the trigger. Do not place your finger on the trigger until you are ready to fire.
- 7 We recommend you not to shoot at hard surfaces which may cause the shot to bounce off, at water or in water.
- 8 The user of the air rifle should never take any drugs and/or alcohol.
- 9 Do not use the used buck shots (ammunition) more than once.
- 10 Do not load the air rifle until you're ready for shooting. Do not walk, run or jump when your air rifle is loaded. Never store a rifle that is ready to shoot in your car.
- 11 Store the air rifle and buck shots out of reach of children.
- 12 When you use and maintain the air rifle ensure that there are no buck shots left in the chamber.
- 13 Do not tamper with any part of your air rifle. When a malfunction occurs consult a gun and rifle repairer.
- 14 Do not leave the shooting grounds or the hunting eld until you're sure that your rifle is completely empty. Make a nal check. Set your rie and take a shot towards an empty area.

### WARNING!

The user shall be responsible for all injuries and damages that could result from the incorrect, faulty, careless or ill-intentioned use of the air rifle.

The safety system of your rifle is located in front of the trigger.Safety can be turned on / off as shown in Figure-1 and Figure-2. When the safety is on, the trigger is not pulled and the rifle does not fire. Please turn your rifle's safety off by pushing the safety latch towards the arrow shown in Figure-2 and prepare your rifle for shooting. **Caution!** Keep your gun safe until you are ready to shoot with your rifle.

When you take your Ekol Major Air Rifle into your hands make sure that it is empty. Always point the rifle to a safe direction. Nobody can guarantee that the rifle will not fire. Therefore always be cautious.

- 1 Always use eye protection (goggles).
- 2 Always use ear protection (ear cups).
- 3 The air rifle should always be used under the supervision of mature adults (over the age of 18).
- 4 Think first, then fire.
- 5 Even if your rifle is not loaded it should not be directed at people and animals.
- 6 When taking your rifle into your hand, keep your finger away from the trigger. Do not place your finger on the trigger until you are ready to fire.
- 7 We recommend you not to shoot at hard surfaces which may cause the shot to bounce off, at water or in water.
- 8 The user of the air rifle should never take any drugs and/or alcohol.
- 9 Do not use the used buck shots (ammunition) more than once.
- 10 Do not load the air rifle until you're ready for shooting. Do not walk, run or jump when your air rifle is loaded. Never store a rifle that is ready to shoot in your car.
- 11 Store the air rifle and buck shots out of reach of children.
- 12 When you use and maintain the air rifle ensure that there are no buck shots left in the chamber.
- 13 Do not tamper with any part of your air rifle. When a malfunction occurs consult a gun and rifle repairer.
- 14 Do not leave the shooting grounds or the hunting eld until you're sure that your rifle is completely empty. Make a nal check. Set your rie and take a shot towards an empty area.

### GERMAN

The user shall be responsible for all injuries and damages that could result from the incorrect, faulty, careless or ill-intentioned use of the air rifle.

The safety system of your rifle is located in front of the trigger.Safety can be turned on / off as shown in Figure-1 and Figure-2. When the safety is on, the trigger is not pulled and the rifle does not fire. Please turn your rifle's safety off by pushing the safety latch towards the arrow shown in Figure-2 and prepare your rifle for shooting. **Caution!** Keep your gun safe until you are ready to shoot with your rifle.

When you take your Ekol Major Air Rifle into your hands make sure that it is empty. Always point the rifle to a safe direction. Nobody can guarantee that the rifle will not fire. Therefore always be cautious.

- 1 Always use eye protection (goggles).
- 2 Always use ear protection (ear cups).
- 3 The air rifle should always be used under the supervision of mature adults (over the age of 18).
- 4 Think first, then fire.
- 5 Even if your rifle is not loaded it should not be directed at people and animals.
- 6 When taking your rifle into your hand, keep your finger away from the trigger. Do not place your finger on the trigger until you are ready to fire.
- 7 We recommend you not to shoot at hard surfaces which may cause the shot to bounce off, at water or in water.
- 8 The user of the air rifle should never take any drugs and/or alcohol.
- 9 Do not use the used buck shots (ammunition) more than once.
- 10 Do not load the air rifle until you're ready for shooting. Do not walk, run or jump when your air rifle is loaded. Never store a rifle that is ready to shoot in your car.
- 11 Store the air rifle and buck shots out of reach of children.
- 12 When you use and maintain the air rifle ensure that there are no buck shots left in the chamber.
- 13 Do not tamper with any part of your air rifle. When a malfunction occurs consult a gun and rifle repairer.
- 14 Do not leave the shooting grounds or the hunting eld until you're sure that your rifle is completely empty. Make a nal check. Set your rie and take a shot towards an empty area.

### WARNING!

The user shall be responsible for all injuries and damages that could result from the incorrect, faulty, careless or ill-intentioned use of the air rifle.

The safety system of your rifle is located in front of the trigger.Safety can be turned on / off as shown in Figure-1 and Figure-2. When the safety is on, the trigger is not pulled and the rifle does not fire. Please turn your rifle's safety off by pushing the safety latch towards the arrow shown in Figure-2 and prepare your rifle for shooting. **Caution!** Keep your gun safe until you are ready to shoot with your rifle.

When you take your Ekol Major Air Rifle into your hands make sure that it is empty. Always point the rifle to a safe direction. Nobody can guarantee that the rifle will not fire. Therefore always be cautious.

- 1 Always use eye protection (goggles).
- 2 Always use ear protection (ear cups).
- 3 The air rifle should always be used under the supervision of mature adults (over the age of 18).
- 4 Think first, then fire.
- 5 Even if your rifle is not loaded it should not be directed at people and animals.
- 6 When taking your rifle into your hand, keep your finger away from the trigger. Do not place your finger on the trigger until you are ready to fire.
- 7 We recommend you not to shoot at hard surfaces which may cause the shot to bounce off, at water or in water.
- 8 The user of the air rifle should never take any drugs and/or alcohol.
- 9 Do not use the used buck shots (ammunition) more than once.
- 10 Do not load the air rifle until you're ready for shooting. Do not walk, run or jump when your air rifle is loaded. Never store a rifle that is ready to shoot in your car.
- 11 Store the air rifle and buck shots out of reach of children.
- 12 When you use and maintain the air rifle ensure that there are no buck shots left in the chamber.
- 13 Do not tamper with any part of your air rifle. When a malfunction occurs consult a gun and rifle repairer.
- 14 Do not leave the shooting grounds or the hunting eld until you're sure that your rifle is completely empty. Make a nal check. Set your rie and take a shot towards an empty area.

### ENGLISH

The user shall be responsible for all injuries and damages that could result from the incorrect, faulty, careless or ill-intentioned use of the air rifle.

The safety system of your rifle is located in front of the trigger.Safety can be turned on / off as shown in Figure-1 and Figure-2. When the safety is on, the trigger is not pulled and the rifle does not fire. Please turn your rifle's safety off by pushing the safety latch towards the arrow shown in Figure-2 and prepare your rifle for shooting. **Caution!** Keep your gun safe until you are ready to shoot with your rifle.

When you take your Ekol Major Air Rifle into your hands make sure that it is empty. Always point the rifle to a safe direction. Nobody can guarantee that the rifle will not fire. Therefore always be cautious.

- 1 Always use eye protection (goggles).
- 2 Always use ear protection (ear cups).
- 3 The air rifle should always be used under the supervision of mature adults (over the age of 18).
- 4 Think first, then fire.
- 5 Even if your rifle is not loaded it should not be directed at people and animals.
- 6 When taking your rifle into your hand, keep your finger away from the trigger. Do not place your finger on the trigger until you are ready to fire.
- 7 We recommend you not to shoot at hard surfaces which may cause the shot to bounce off, at water or in water.
- 8 The user of the air rifle should never take any drugs and/or alcohol.
- 9 Do not use the used buck shots (ammunition) more than once.
- 10 Do not load the air rifle until you're ready for shooting. Do not walk, run or jump when your air rifle is loaded. Never store a rifle that is ready to shoot in your car.
- 11 Store the air rifle and buck shots out of reach of children.
- 12 When you use and maintain the air rifle ensure that there are no buck shots left in the chamber.
- 13 Do not tamper with any part of your air rifle. When a malfunction occurs consult a gun and rifle repairer.
- 14 Do not leave the shooting grounds or the hunting eld until you're sure that your rifle is completely empty. Make a nal check. Set your rie and take a shot towards an empty area.

### WARNING!

The user shall be responsible for all injuries and damages that could result from the incorrect, faulty, careless or ill-intentioned use of the air rifle.

The safety system of your rifle is located in front of the trigger.Safety can be turned on / off as shown in Figure-1 and Figure-2. When the safety is on, the trigger is not pulled and the rifle does not fire. Please turn your rifle's safety off by pushing the safety latch towards the arrow shown in Figure-2 and prepare your rifle for shooting. **Caution!** Keep your gun safe until you are ready to shoot with your rifle.

When you take your Ekol Major Air Rifle into your hands make sure that it is empty. Always point the rifle to a safe direction. Nobody can guarantee that the rifle will not fire. Therefore always be cautious.

- 1 Always use eye protection (goggles).
- 2 Always use ear protection (ear cups).
- 3 The air rifle should always be used under the supervision of mature adults (over the age of 18).
- 4 Think first, then fire.
- 5 Even if your rifle is not loaded it should not be directed at people and animals.
- 6 When taking your rifle into your hand, keep your finger away from the trigger. Do not place your finger on the trigger until you are ready to fire.
- 7 We recommend you not to shoot at hard surfaces which may cause the shot to bounce off, at water or in water.
- 8 The user of the air rifle should never take any drugs and/or alcohol.
- 9 Do not use the used buck shots (ammunition) more than once.
- 10 Do not load the air rifle until you're ready for shooting. Do not walk, run or jump when your air rifle is loaded. Never store a rifle that is ready to shoot in your car.
- 11 Store the air rifle and buck shots out of reach of children.
- 12 When you use and maintain the air rifle ensure that there are no buck shots left in the chamber.
- 13 Do not tamper with any part of your air rifle. When a malfunction occurs consult a gun and rifle repairer.
- 14 Do not leave the shooting grounds or the hunting eld until you're sure that your rifle is completely empty. Make a nal check. Set your rie and take a shot towards an empty area.

### WARNING!

The user shall be responsible for all injuries and damages that could result from the incorrect, faulty, careless or ill-intentioned use of the air rifle.

The safety system of your rifle is located in front of the trigger.Safety can be turned on / off as shown in Figure-1 and Figure-2. When the safety is on, the trigger is not pulled and the rifle does not fire. Please turn your rifle's safety off by pushing the safety latch towards the arrow shown in Figure-2 and prepare your rifle for shooting. **Caution!** Keep your gun safe until you are ready to shoot with your rifle.

When you take your Ekol Major Air Rifle into your hands make sure that it is empty. Always point the rifle to a safe direction. Nobody can guarantee that the rifle will not fire. Therefore always be cautious.

- 1 Always use eye protection (goggles).
- 2 Always use ear protection (ear cups).
- 3 The air rifle should always be used under the supervision of mature adults (over the age of 18).
- 4 Think first, then fire.
- 5 Even if your rifle is not loaded it should not be directed at people and animals.
- 6 When taking your rifle into your hand, keep your finger away from the trigger. Do not place your finger on the trigger until you are ready to fire.
- 7 We recommend you not to shoot at hard surfaces which may cause the shot to bounce off, at water or in water.
- 8 The user of the air rifle should never take any drugs and/or alcohol.
- 9 Do not use the used buck shots (ammunition) more than once.
- 10 Do not load the air rifle until you're ready for shooting. Do not walk, run or jump when your air rifle is loaded. Never store a rifle that is ready to shoot in your car.
- 11 Store the air rifle and buck shots out of reach of children.
- 12 When you use and maintain the air rifle ensure that there are no buck shots left in the chamber.
- 13 Do not tamper with any part of your air rifle. When a malfunction occurs consult a gun and rifle repairer.
- 14 Do not leave the shooting grounds or the hunting eld until you're sure that your rifle is completely empty. Make a nal check. Set your rie and take a shot towards an empty area.

### WARNING!

The user shall be responsible for all injuries and damages that could result from the incorrect, faulty, careless or ill-intentioned use of the air rifle.

The safety system of your rifle is located in front of the trigger.Safety can be turned on / off as shown in Figure-1 and Figure-2. When the safety is on, the trigger is not pulled and the rifle does not fire. Please turn your rifle's safety off by pushing the safety latch towards the arrow shown in Figure-2 and prepare your rifle for shooting. **Caution!** Keep your gun safe until you are ready to shoot with your rifle.

When you take your Ekol Major Air Rifle into your hands make sure that it is empty. Always point the rifle to a safe direction. Nobody can guarantee that the rifle will not fire. Therefore always be cautious.

- 1 Always use eye protection (goggles).
- 2 Always use ear protection (ear cups).
- 3 The air rifle should always be used under the supervision of mature adults (over the age of 18).
- 4 Think first, then fire.
- 5 Even if your rifle is not loaded it should not be directed at people and animals.
- 6 When taking your rifle into your hand, keep your finger away from the trigger. Do not place your finger on the trigger until you are ready to fire.
- 7 We recommend you not to shoot at hard surfaces which may cause the shot to bounce off, at water or in water.
- 8 The user of the air rifle should never take any drugs and/or alcohol.
- 9 Do not use the used buck shots (ammunition) more than once.
- 10 Do not load the air rifle until you're ready for shooting. Do not walk, run or jump when your air rifle is loaded. Never store a rifle that is ready to shoot in your car.
- 11 Store the air rifle and buck shots out of reach of children.
- 12 When you use and maintain the air rifle ensure that there are no buck shots left in the chamber.
- 13 Do not tamper with any part of your air rifle. When a malfunction occurs consult a gun and rifle repairer.
- 14 Do not leave the shooting grounds or the hunting eld until you're sure that your rifle is completely empty. Make a nal check. Set your rie and take a shot towards an empty area.

### WARNING!

The user shall be responsible for all injuries and damages that could result from the incorrect, faulty, careless or ill-intentioned use of the air rifle.

The safety system of your rifle is located in front of the trigger.Safety can be turned on / off as shown in Figure-1 and Figure-2. When the safety is on, the trigger is not pulled and the rifle does not fire. Please turn your rifle's safety off by pushing the safety latch towards the arrow shown in Figure-2 and prepare your rifle for shooting. **Caution!** Keep your gun safe until you are ready to shoot with your rifle.

When you take your Ekol Major Air Rifle into your hands make sure that it is empty. Always point the rifle to a safe direction. Nobody can guarantee that the rifle will not fire. Therefore always be cautious.

- 1 Always use eye protection (goggles).
- 2 Always use ear protection (ear cups).
- 3 The air rifle should always be used under the supervision of mature adults (over the age of 18).
- 4 Think first, then fire.
- 5 Even if your rifle is not loaded it should not be directed at people and animals.
- 6 When taking your rifle into your hand, keep your finger away from the trigger. Do not place your finger on the trigger until you are ready to fire.
- 7 We recommend you not to shoot at hard surfaces which may cause the shot to bounce off, at water or in water.
- 8 The user of the air rifle should never take any drugs and/or alcohol.
- 9 Do not use the used buck shots (ammunition) more than once.
- 10 Do not load the air rifle until you're ready for shooting. Do not walk, run or jump when your air rifle is loaded. Never store a rifle that is ready to shoot in your car.
- 11 Store the air rifle and buck shots out of reach of children.
- 12 When you use and maintain the air rifle ensure that there are no buck shots left in the chamber.
- 13 Do not tamper with any part of your air rifle. When a malfunction occurs consult a gun and rifle repairer.
- 14 Do not leave the shooting grounds or the hunting eld until you're sure that your rifle is completely empty. Make a nal check. Set your rie and take a shot towards an empty area.

### WARNING!

The user shall be responsible for all injuries and damages that could result from the incorrect, faulty, careless or ill-intentioned use of the air rifle.

The safety system of your rifle is located in front of the trigger.Safety can be turned on / off as shown in Figure-1 and Figure-2. When the safety is on, the trigger is not pulled and the rifle does not fire. Please turn your rifle's safety off by pushing the safety latch towards the arrow shown in Figure-2 and prepare your rifle for shooting. **Caution!** Keep your gun safe until you are ready to shoot with your rifle.

When you take your Ekol Major Air Rifle into your hands make sure that it is empty. Always point the rifle to a safe direction. Nobody can guarantee that the rifle will not fire. Therefore always be cautious.

- 1 Always use eye protection (goggles).
- 2 Always use ear protection (ear cups).
- 3 The air rifle should always be used under the supervision of mature adults (over the age of 18).
- 4 Think first, then fire.
- 5 Even if your rifle is not loaded it should not be directed at people and animals.
- 6 When taking your rifle into your hand, keep your finger away from the trigger. Do not place your finger on the trigger until you are ready to fire.
- 7 We recommend you not to shoot at hard surfaces which may cause the shot to bounce off, at water or in water.
- 8 The user of the air rifle should never take any drugs and/or alcohol.
- 9 Do not use the used buck shots (ammunition) more than once.
- 10 Do not load the air rifle until you're ready for shooting. Do not walk, run or jump when your air rifle is loaded. Never store a rifle that is ready to shoot in your car.
- 11 Store the air rifle and buck shots out of reach of children.
- 12 When you use and maintain the air rifle ensure that there are no buck shots left in the chamber.
- 13 Do not tamper with any part of your air rifle. When a malfunction occurs consult a gun and rifle repairer.
- 14 Do not leave the shooting grounds or the hunting eld until you're sure that your rifle is completely empty. Make a nal check. Set your rie and take a shot towards an empty area.

### WARNING!

The user shall be responsible for all injuries and damages that could result from the incorrect, faulty, careless or ill-intentioned use of the air rifle.

The safety system of your rifle is located in front of the trigger.Safety can be turned on / off as shown in Figure-1 and Figure-2. When the safety is on, the trigger is not pulled and the rifle does not fire. Please turn your rifle's safety off by pushing the safety latch towards the arrow shown in Figure-2 and prepare your rifle for shooting. **Caution!** Keep your gun safe until you are ready to shoot with your rifle.

When you take your Ekol Major Air Rifle into your hands make sure that it is empty. Always point the rifle to a safe direction. Nobody can guarantee that the rifle will not fire. Therefore always be cautious.

- 1 Always use eye protection (goggles).
- 2 Always use ear protection (ear cups).
- 3 The air rifle should always be used under the supervision of mature adults (over the age of 18).
- 4 Think first, then fire.
- 5 Even if your rifle is not loaded it should not be directed at people and animals.
- 6 When taking your rifle into your hand, keep your finger away from the trigger. Do not place your finger on the trigger until you are ready to fire.
- 7 We recommend you not to shoot at hard surfaces which may cause the shot to bounce off, at water or in water.
- 8 The user of the air rifle should never take any drugs and/or alcohol.
- 9 Do not use the used buck shots (ammunition) more than once.
- 10 Do not load the air rifle until you're ready for shooting. Do not walk, run or jump when your air rifle is loaded. Never store a rifle that is ready to shoot in your car.
- 11 Store the air rifle and buck shots out of reach of children.
- 12 When you use and maintain the air rifle ensure that there are no buck shots left in the chamber.
- 13 Do not tamper with any part of your air rifle. When a malfunction occurs consult a gun and rifle repairer.
- 14 Do not leave the shooting grounds or the hunting eld until you're sure that your rifle is completely empty. Make a nal check. Set your rie and take a shot towards an empty area.

### WARNING!

The user shall be responsible for all injuries and damages that could result from the incorrect, faulty, careless or ill-intentioned use of the air rifle.

The safety system of your rifle is located in front of the trigger.Safety can be turned on / off as shown in Figure-1 and Figure-2. When the safety is on, the trigger is not pulled and the rifle does not fire. Please turn your rifle's safety off by pushing the safety latch towards the arrow shown in Figure-2 and prepare your rifle for shooting. **Caution!** Keep your gun safe until you are ready to shoot with your rifle.

When you take your Ekol Major Air Rifle into your hands make sure that it is empty. Always point the rifle to a safe direction. Nobody can guarantee that the rifle will not fire. Therefore always be cautious.