



AAKCMF54系列說明書 AAKCMF54 INSTRUCTION MANUAL

KWC KIEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO.89, LN. 168, YILIN RD.,
RENDE DIST., TAINAN CITY
71752, TAIWAN (R.O.C.)
TEL : +886-6-2798175
FAX : +886-6-2798176
sales@kwcgun.com
www.kwcgun.com



操作/OPERATION

射擊前的準備 BEFORE SHOOTING

1.取出彈匣 RELEASE MAGAZINE




- ▲ 注意:請勿使彈匣直接掉落地面,以防止變形或損壞。
- ▲ CAUTION: Magazine directly falling on ground could cause deform or damage on it. Please be aware.

2.CO2小鋼瓶的使用 INSTALLING 12G CO2 CARTRIDGE

逆時針轉出旋塞後,置入小鋼瓶B,再以順時針方向鎖緊旋塞A。當刺破鋼瓶出氣時,請快速鎖緊。

Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

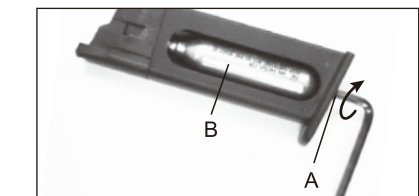


- ▲ 注意:為維護彈匣使用壽命,請盡可能不要殘留CO2氣體於彈匣內。
- ▲ CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3.拉下滑粒。 Pull the magazine follower down.

4.填裝B.B彈。 Loading BBs.

為了使擊發順暢,填裝方法是讓B.B彈在彈匣中一粒接著一粒。

For smooth shooting, Load BBs one by one.

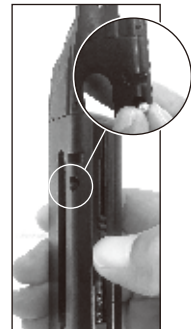

5.最多可裝15粒。 Maximum BB capacity is 15 rounds.

7. B.B彈上膛 CHAMBERING THE BB

將上蓋往後拉到底,放開上蓋則上蓋會自動回位,同時亦將B.B彈送上膛完成射擊準備。

Pulling the slide back, when the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.



- ▲ 注意:拉動上蓋時,請勿將手指扣住扳機,以免發生不當射擊,造成危險。
- ▲ CAUTION: When pulling the slide, please don't pull the trigger in the same time to avoid misfire and dangerous.


8. 保險切換 SWITCH SAFETY



9. HOP UP調整 HOP-UP ADJUSTMENT

往左B.B彈上飄減弱,往右B.B彈上飄增強。

Turn right to make Hop-up bigger and turn left to make Hop-up smaller.

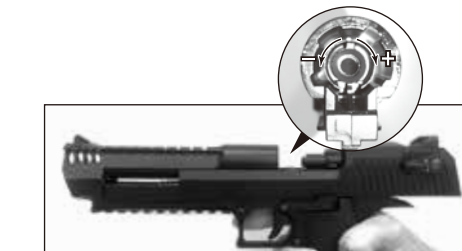


拆解/DIS-ASSEMBLY

1.先退下彈匣。 release the magazine



2.卸下彈匣之後,請將上蓋拉到底,並將止動片往上撥,讓止動片卡住上蓋。

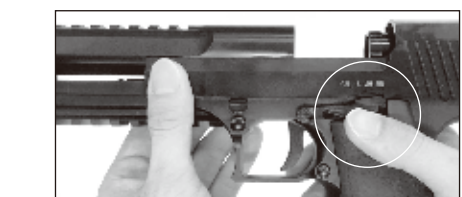

3.拆下/移除EA106螺絲。 Remove screw EA106.



10. 射擊 SHOOTING

對準目標區後扣下扳機,則B.B彈將被射擊出去。

Aim the target and pull the trigger to shoot.



- ▲ 注意:B.B彈用完時,上蓋會後定卡住。
- ▲ CAUTION: When magazine out of BB, it has hold open function as real pistol.

組裝補充說明/ASSEMBLY REMARK

鎖附螺絲EA106時,請注意務必與鎖附零件氣缸齊平,突出會造成與滑套作動干涉。

When fasten screw EA106, please make sure this screw align with cylinder. Protruding out will cause interference with slide movement.




故障的原因與排除/BREAK DOWN FAQ

* 卡彈可能原因: THE REASON FOR BBS JAM:

- a. 裝彈排列不整齊
The BBs in the magazine does not line up very well.
- b. 不良B.B彈 Bad quality BBs.
- c. 空擊發易造成零件損耗,請避免此動作
Please avoid dry firing, for it could cause parts deformed or damage.

* 排除:將上蓋往後拉,向下倒出即可。
Solution: pull the slide back and pour the BBs out from slide.

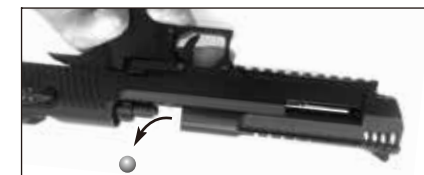

* 射擊過程中偶而會發生,在作動時上蓋突然停止無法作動,而擊鐵回到原位,彈匣中仍有足夠瓦斯和B.B彈。

During the shooting process, sometimes the slide and the hammer stop unexpectedly.





* 排除:此時並非故障,只需重新上膛便可繼續使用。
Solution: This not the failure. Just reload it and operate again.

保養及維護/ MAINTENANCE GUIDE

每當射擊約2000發時,建議如下圖所示,以矽油在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑。

After every 2000 BBs shot, spray silicone oil on the surface between slide and frame, hammer and firing pin for lubrication. Suggestion shown as below pictures.

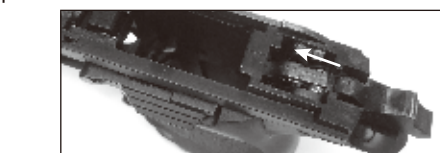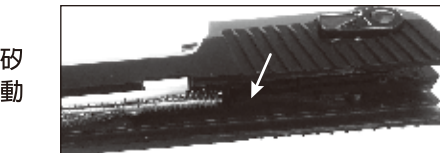

WARNING 警告

請務必嚴格遵守使用說明指導書
READ THIS OWNER'S MANUAL COMPLETELY

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故,請務必詳讀說明書,正確的操作享受愉快的射擊運動。

- 1.除了發射時外,不要將手指頭掛在扳機上。
- 2.選擇安全與適當標靶。
- 3.在非使用期間,請保持保險關閉且退彈的狀態,就算在非使用狀態,也要如同其已裝彈。
- 4.如任何的機械產品,槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍,請勿將槍口對人。
- 5.千萬不要對堅硬或平坦表面、水面射擊,以避免跳彈。
- 6.請妥善保管產品在未成年孩童無法伸手取得的場所。
- 7.每次使用前後都應該檢查擋彈物,假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 8.請使用高品質BB彈,請勿使用①口徑大於4.4mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 9.最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內,高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 10.檢查任何掉落之槍枝,以確保未影響其功能。

This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- 1. Do not put your finger on the trigger except shooting.
- 2. Please choose safe and proper target.
- 3. Please always keep the airgun on safe and unloaded when not using.
- 4. Like all mechanical devices, an airgun safety could fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- 5. To avoid ricochet. Never shoot at a hard or flat surface or at water.
- 6. Keep the airgun out of reach for underage children.
- 7. Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- 8. Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm ②BB with unsmoothed surface ③reused BB that has been fired ④incorrect projectiles not design for this airgun.
- 9. Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
- 10. Check any gun that has been dropped to ensure that its function has not been affected.

★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。

★Always wear eye protection when using airgun.

★使用低動能遊戲用槍前，請務必詳讀說明書內容。

★Read the owner's manual before using the airgun.

★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。

★Never brandish or aiming this airgun at any people or animals. Brandish this airgun in public is dangerous and may be a crime.

★請確認後再發射BB彈方向，附近無人或動物存在。

★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

★攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。確認並未上膛和開啓保險。

★When in public, always carry the airgun in a locked carrying case or bag. Make sure it is unloaded and on safe.

★請不要由槍口向內探視。



★To Avoid accidental discharge, do not look directly into the barrel.

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。

★Disassemble, modify, or alter of your airgun may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.

AAKCMF54 系列零件表			
編號	零件名稱	編號	零件名稱
KG51-P01	本體	KG53-Z52	撞針本體
KCMB54-P02	彈匣底座蓋	KG53-Z53	擊鐵卡榫
KCMB54-P03	彈匣上部	KG53-Z54	氣閥撞針
KCMB54-P04	滑套射嘴		
KCMB54-P06	槍管接筒	KCMB54-S01	彈匣壓簧
KCMB54-P07	氣流控制件	KCMB54-S02	槍管扣環
KCMB54-P08	HOP-UP調整圈	KCMB54-S03	射嘴回位壓簧
KCMB54-P09	前準星	KA51-S03	彈匣卡榫壓簧
KCMB54-P10	後準星	KA51-S04	扳機扭簧
KMB15-P10	心棒迫緊	KA51-S05	保險壓簧
KCMB54-P11	戰術滑軌	KA51-S08	導管卡榫按鈕壓簧
KCMB54-P13	內槍管配件	KG51-S13	撞針扭簧
KG51-P20	氣缸	KG51-S14	撞針定位件扭簧
KG51-P22	氣缸前罩(連發)	KG53-S18	連發擊鐵卡榫扭簧
KCMB54-P28	槍管接筒前部	KG53-S19	連發卡榫扭簧
KG53-P50	槍柄	KG53-S20	連發撞針本體扭簧
		KG15-S20	心棒壓簧
KCMB54-A01	外槍管	KCB51-S31	擊鐵扭簧
KCMB54-A02	上蓋	KCB51-S33	上蓋回位壓簧前
KCMB54-Z01	彈匣本體	KCB51-S43	上蓋止動片扭簧
KCMB54-Z02	彈匣底座	WAG51-DE-606B	上蓋回位壓簧後
KCMB54-Z03	彈匣滑粒		
KCMB54-Z04	保險(左)	KCMB54-B01	內槍管
KCMB54-Z05	保險(右)	KG51-B01	保險螺絲
KG51-Z05	扳機	KG51-B02	扳機軸套
KG51-Z09	導管定位件	KW-B02A	氣瓶頂針
KG51-Z11	保險連桿	KG51-B06	擊鐵軸套
KG51-Z12	上蓋止動片	KG51-B07	氣閥撞針軸套
KG51-Z13	彈匣卡榫(左)	KG51-B08	撞針定位片軸
KG51-Z14	彈匣卡榫(右)	KG51-B13	氣缸配件
KG51-Z18	氣缸後罩	KCB48-B27	心棒
KG51-Z19	回位壓簧導件	KCB51-B31	氣閥本體
KG51-Z22	擊鐵	KCB51-B32	心棒蓋
KG51-Z26	擊鐵箱(左)	KCMB51-B33	軸(彈匣底座)
KG51-Z26	擊鐵箱(右)	KG53-B36	槍柄螺帽
KG51-Z27	槍管導管卡榫	KG53-B37	軸(彈匣上部用)
KA51-Z28	導管卡榫按鈕	KG12-B215	氣瓶頂針迫緊
KG51-Z29	止動片推桿	KCMB54-E01	鉚釘- $\varnothing$ 2.5x8L
KG53-Z50	扳機連桿	KG51-E06	軸(擊鐵)
KG53-Z51	保險連桿配件	KG51-E10	軸(本體)

AAKCMF54 SERIES PARTS LIST			
NO.	UNIT	NO.	UNIT
KG51-P01	FRAME	KG53-Z52	FIRING PIN FRAME
KCMB54-P02	MAGAZINE BASE PLATE	KG53-Z53	HAMMER CATCH
KCMB54-P03	MAGAZINE RIB	KG53-Z54	VALVE HAMMER
KCMB54-P04	LOADING NOZZLE		
KCMB54-P06	BARREL CONNECTOR	KCMB54-S01	MAGAZINE SPRING
KCMB54-P07	FLOATING VALVE	KCMB54-S02	BARREL E RING
KCMB54-P08	HOP UP ADJUST RING	KCMB54-S03	LOADING NOZZLE RECOIL SPRING
KCMB54-P09	FRONT SIGHT	KA51-S03	MAGAZINE CATCH SPRING
KCMB54-P10	REAR SIGHT	KA51-S04	TRIGGER SPRING
KMB15-P10	VALVE PACKING	KA51-S05	SAFETY SPRING
KCMB54-P11	TACTICAL RAIL	KA51-S08	BARREL CATCH BUTTON SPRING
KCMB54-P13	INNER BARREL ACCESSORY	KG51-S13	FIRING PIN SPRING
KG51-P20	CYLINDER	KG51-S14	FIRING PIN LOCATOR SPRING
KG51-P22	CYLINDER FRONT COVER (FULL AUTO)	KG53-S18	FIRING PIN SPRING
KCMB54-P28	FRONT BARREL CONNECTOR	KG53-S19	FULL AUTO CATCH SPRING
KG53-P50	GRIP	KG53-S20	FULL AUTO FIRING PIN SPRING
		KG15-S20	VALVE SPRING
KCMB54-A01	OUTER BARREL	KCB51-S31	HAMMER SPRING
KCMB54-A02	SLIDE	KCB51-S33	RECOIL SPRING FRONT
KCMB54-Z01	MAGAZINE SLIDE	KCB51-S43	SLIDE STOPPER SPRING
KCMB54-Z02	MAGAZINE BASE	WAG51-DE-606B	RECOIL SPRING REAR
KCMB54-Z03	MAGAZINE FOLLOWER		
KCMB54-Z04	SAFETY (L)	KCMB54-B01	INNER BARREL
KCMB54-Z05	SAFETY (R)	KG51-B01	SAFETY SCREW
KG51-Z05	TRIGGER	KG51-B02	TRIGGER SLEEVE
KG51-Z09	BARREL LOCATOR	KW-B02A	PUNCTURE VAVLE
KG51-Z11	SAFETY LINK	KG51-B06	HAMMER SLEEVE
KG51-Z12	SLIDE STOPPER	KG51-B07	VALVE FIRING PIN SLEEVE
KG51-Z13	MAGAZINE CATCH (L)	KG51-B08	FIRING PIN LOCATOR AXLE
KG51-Z14	MAGAZINE CATCH (R)	KG51-B13	CYLINDER SLEEVE
KG51-Z18	CYLINDER BACK COVER	KCB48-B27	VALVE
KG51-Z19	RECOIL SPRING PLATE	KCB51-B31	VALVE FRAME
KG51-Z22	HAMMER	KCB51-B32	VALVE CAP
KG51-Z25	CHASSIS (L)	KCB51-B33	PIN (MAGAZINE BASE)
KG51-Z26	CHASSIS (R)	KG53-B36	GRIP NUT
KG51-Z27	BARREL CATCH	KG53-B37	PIN (MAGAZINE RIB)
KA51-Z28	BARREL CATCH BUTTON	KG12-B215	PUNCTURE VAVLE PACKING
KG51-Z29	SLIDE STOPPER LEVER	KCMB54-E01	RIVET- $\varnothing$ 2.5X8L
KG53-Z50	TRIGGER BAR	KG51-E06	PIN (HAMMER)
KG53-Z51	SAFETY LINK ACCESSORY	KG51-E10	PIN (FRAME)

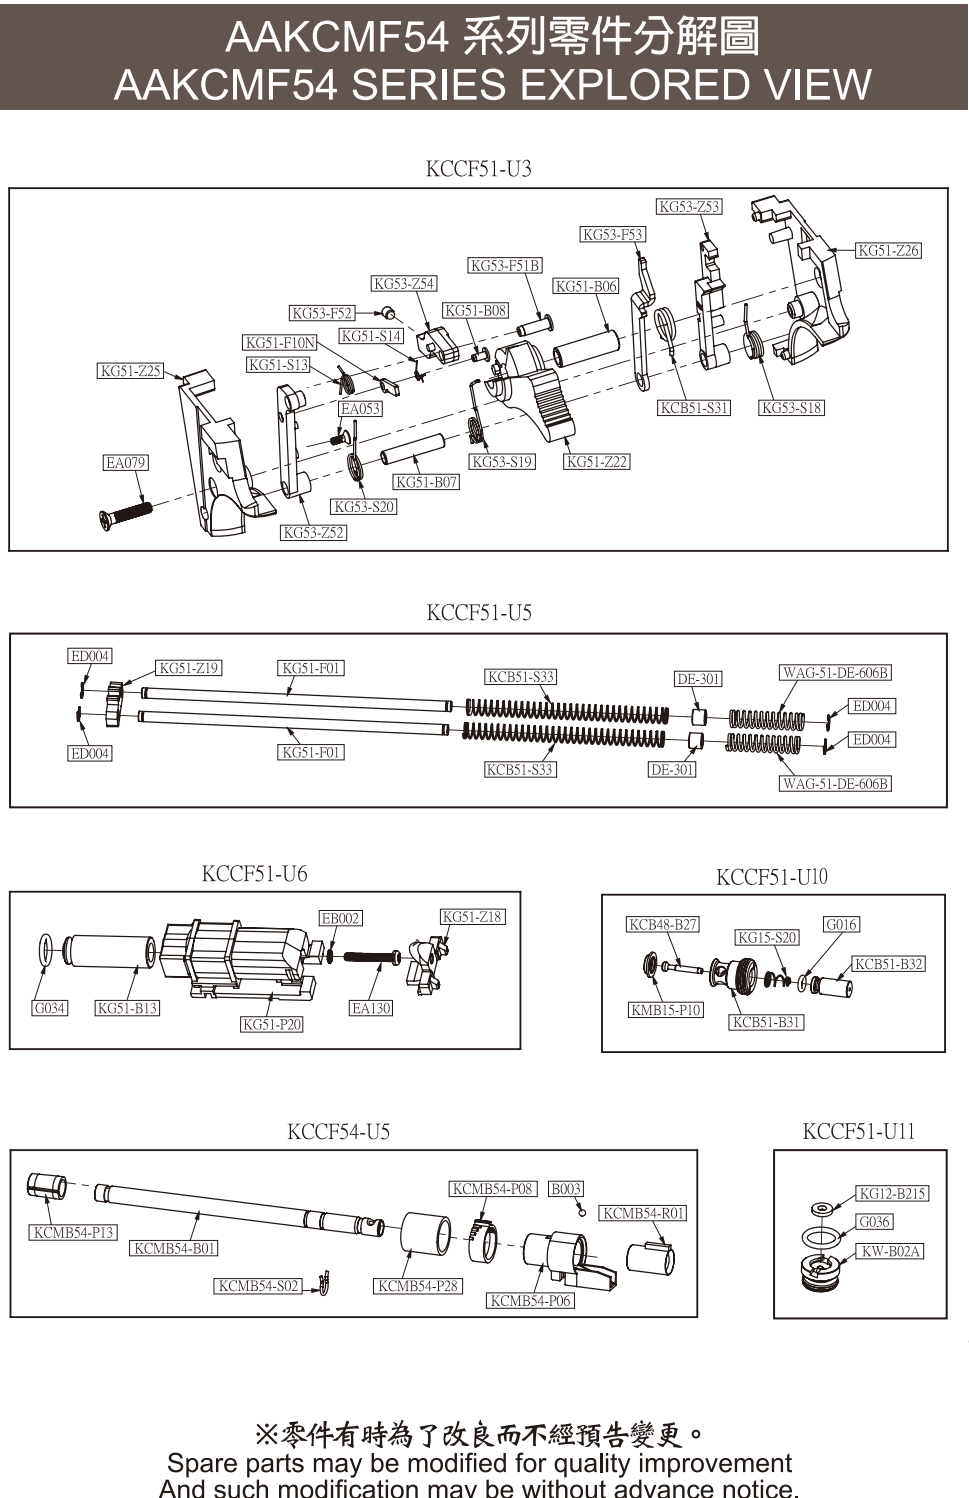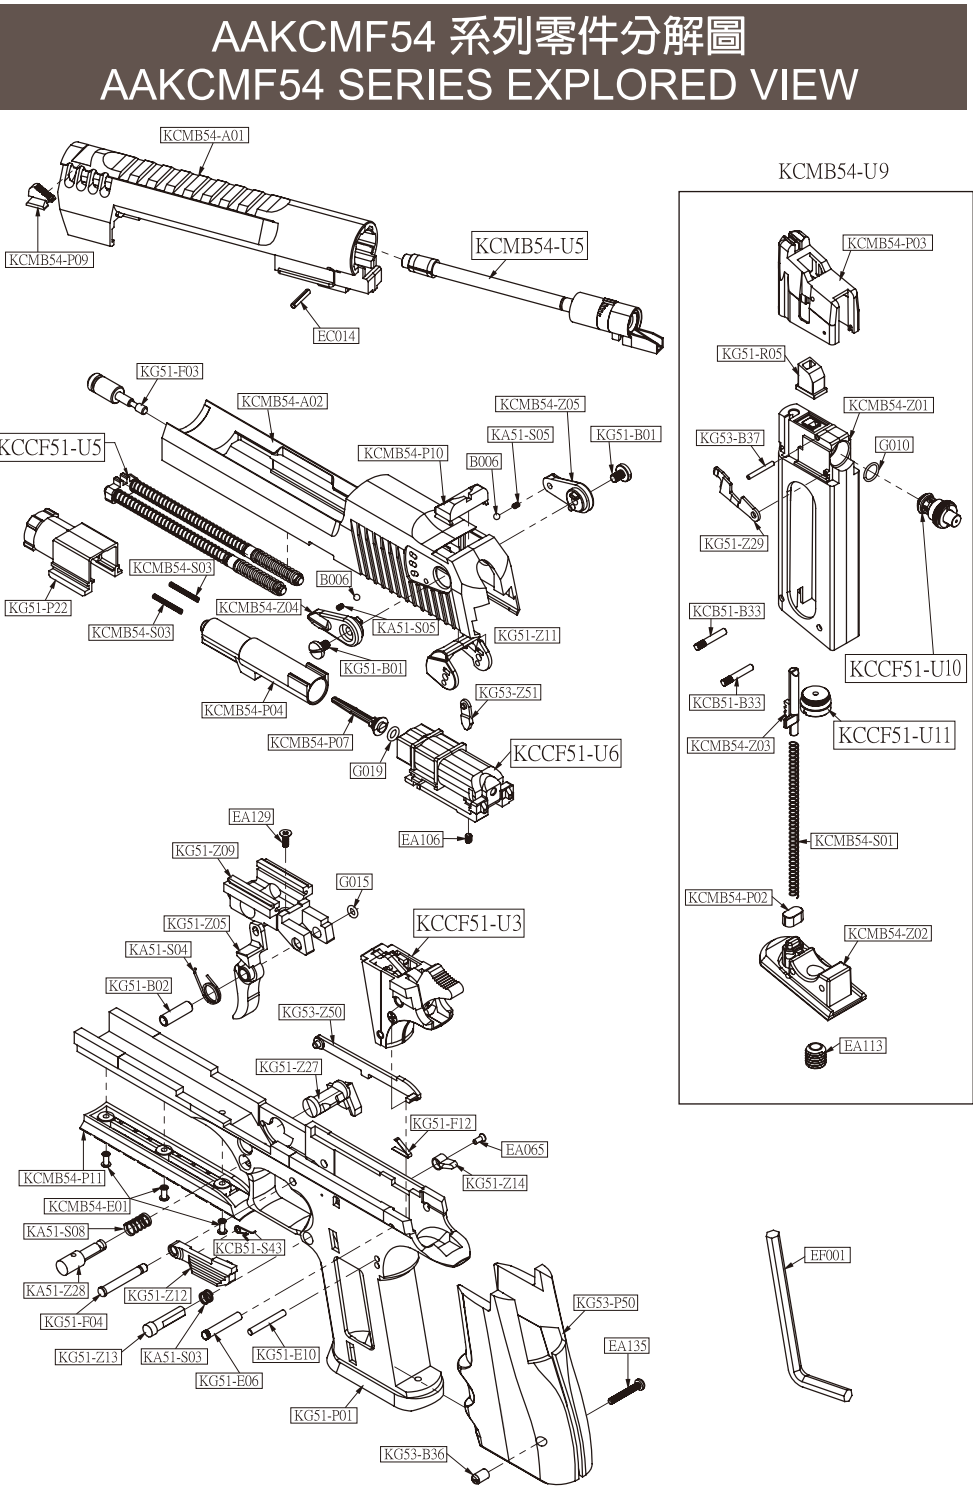

※零件有時為了改良而不經預告變更。
Spare parts may be modified for quality improvement
And such modification may be without advance notice.

Do not display this pistol in public—it may confuse people and may be a crime.
請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。